


POPHAM AIRFIELD

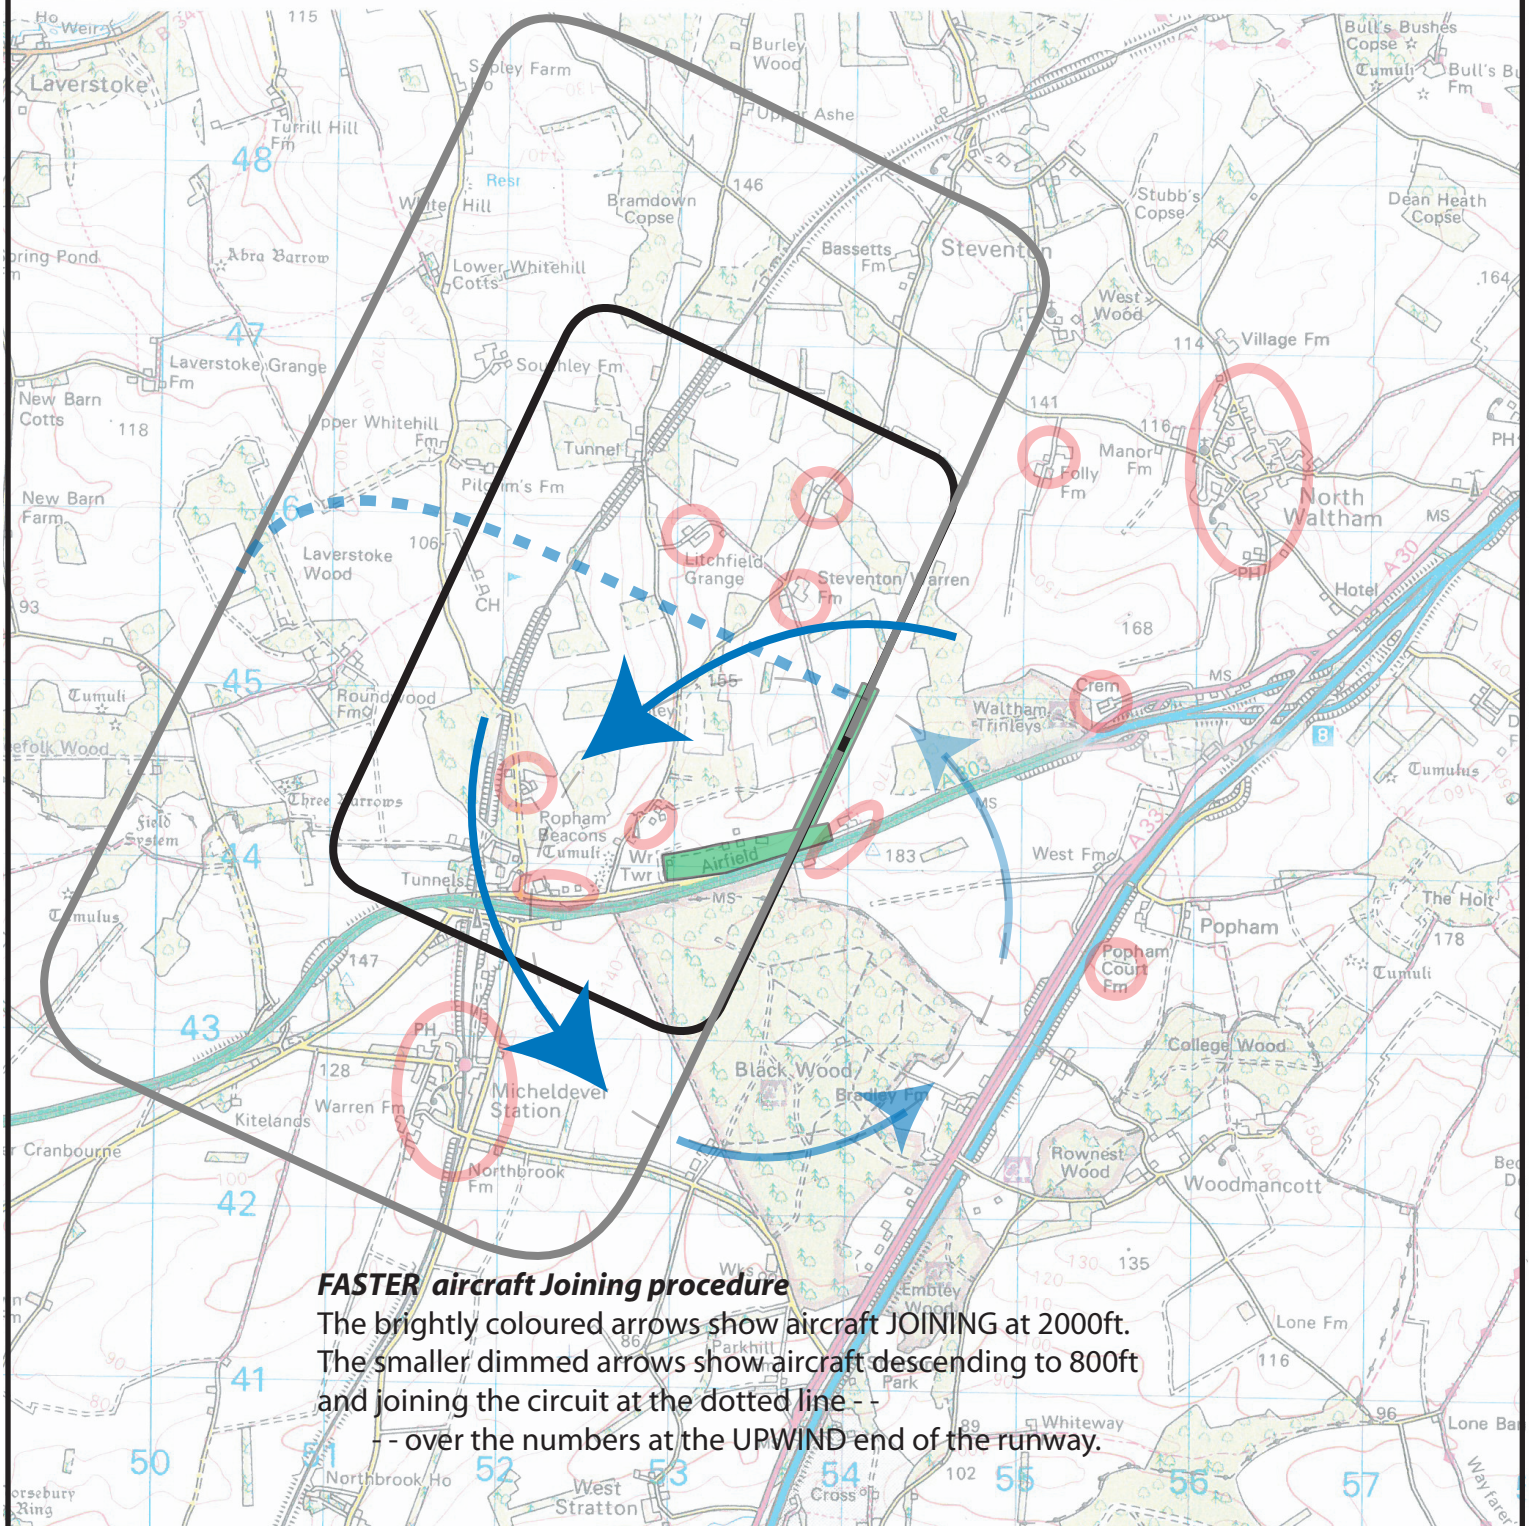

FASTER aircraft Joining procedure

The brightly coloured arrows show aircraft JOINING at 2000ft.
The smaller dimmed arrows show aircraft descending to 800ft
and joining the circuit at the dotted line - -
- - over the numbers at the UPWIND end of the runway.

Runway 03

Join Overhead at **2000ft** (QFE).
Then descend to **800ft** on the **DEAD** side.
Join the circuit at the **upwind** runway end.