


# POPHAM AIRFIELD

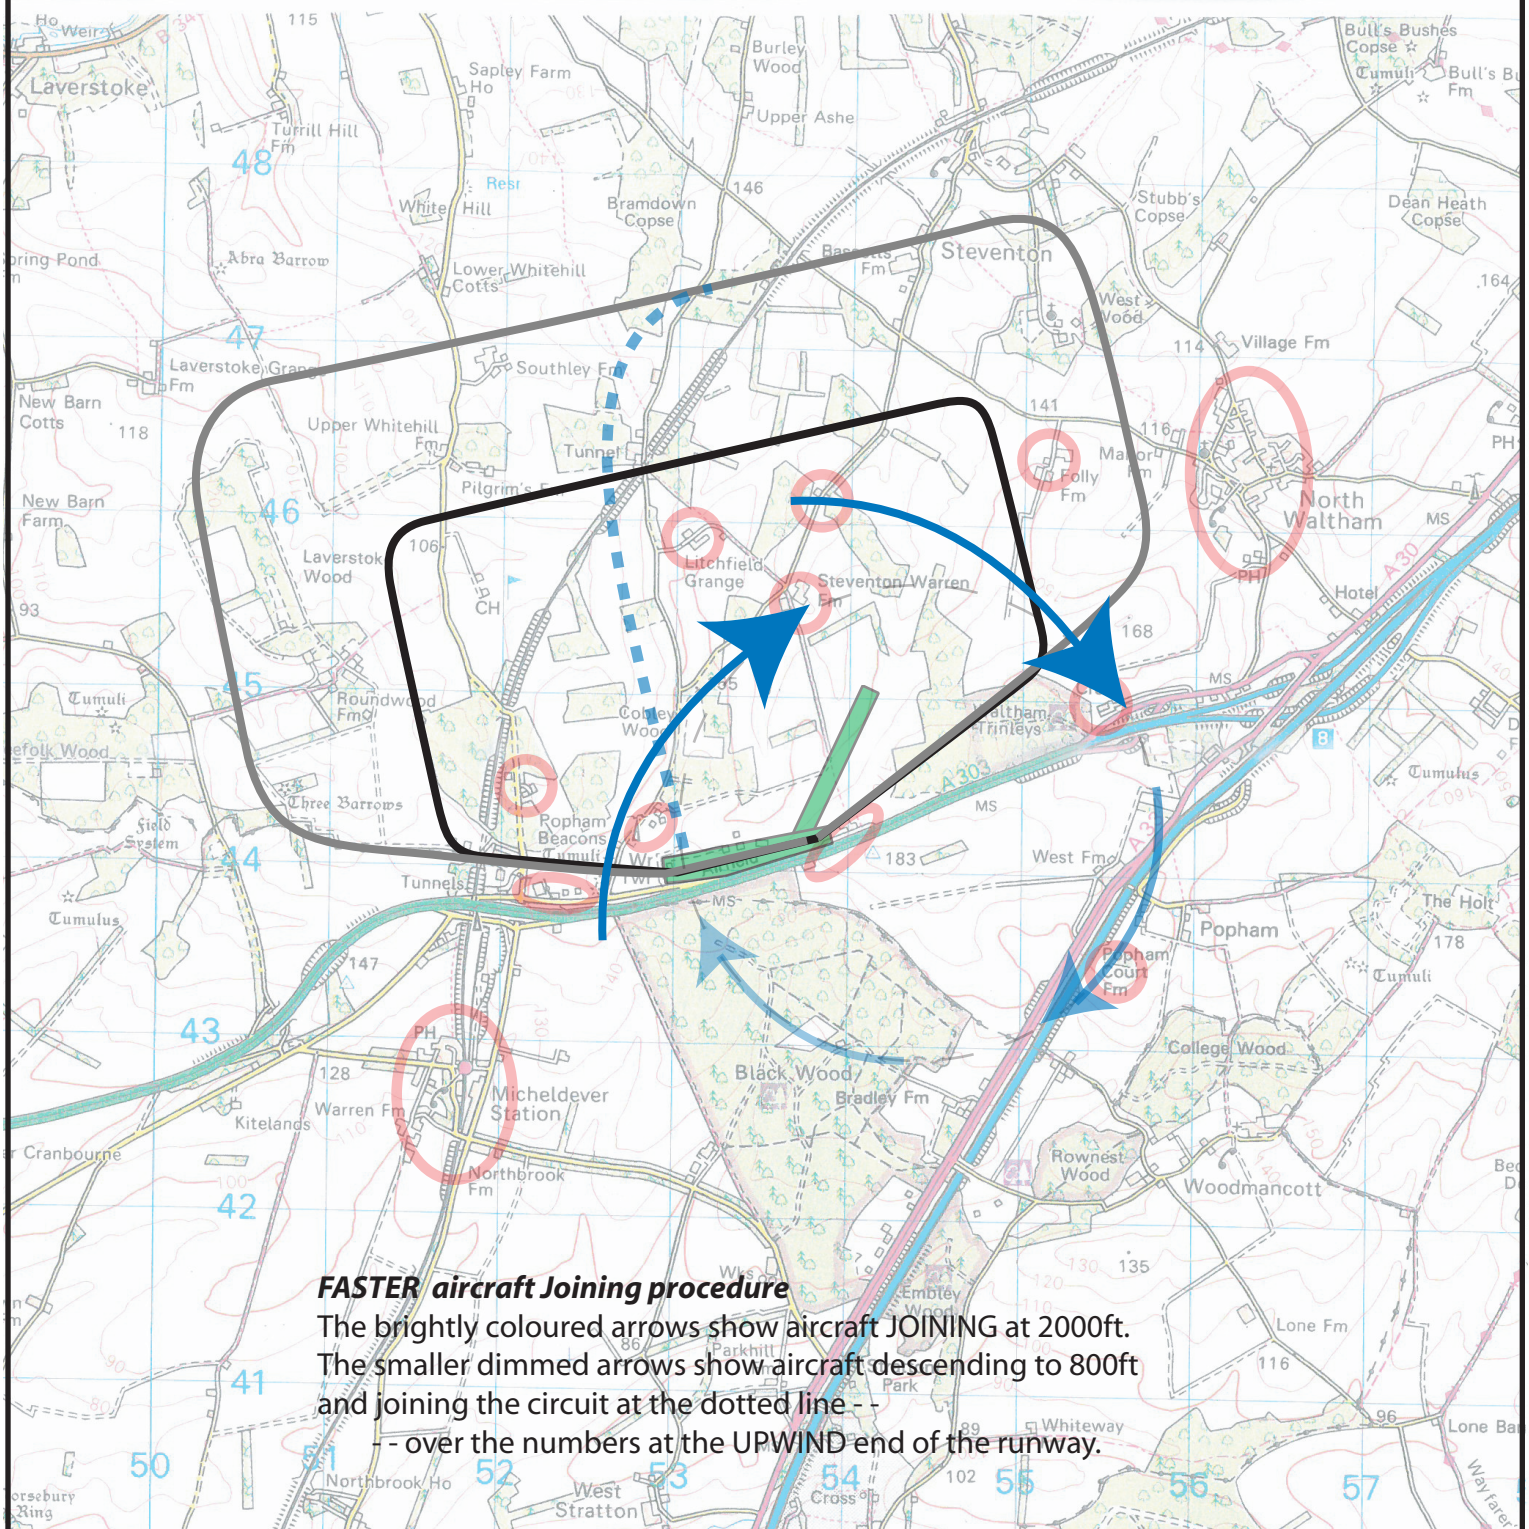

## **FASTER aircraft Joining procedure**

The brightly coloured arrows show aircraft **JOINING** at 2000ft.  
The smaller dimmed arrows show aircraft descending to 800ft  
and joining the circuit at the dotted line - -  
- - over the numbers at the **UPWIND** end of the runway.

## **Runway 26**

Join Overhead at **2000ft** (QFE).  
Then descend to **800ft** on the **DEAD** side.  
Join the circuit at the **upwind** runway end.